






Carport Installation Manual

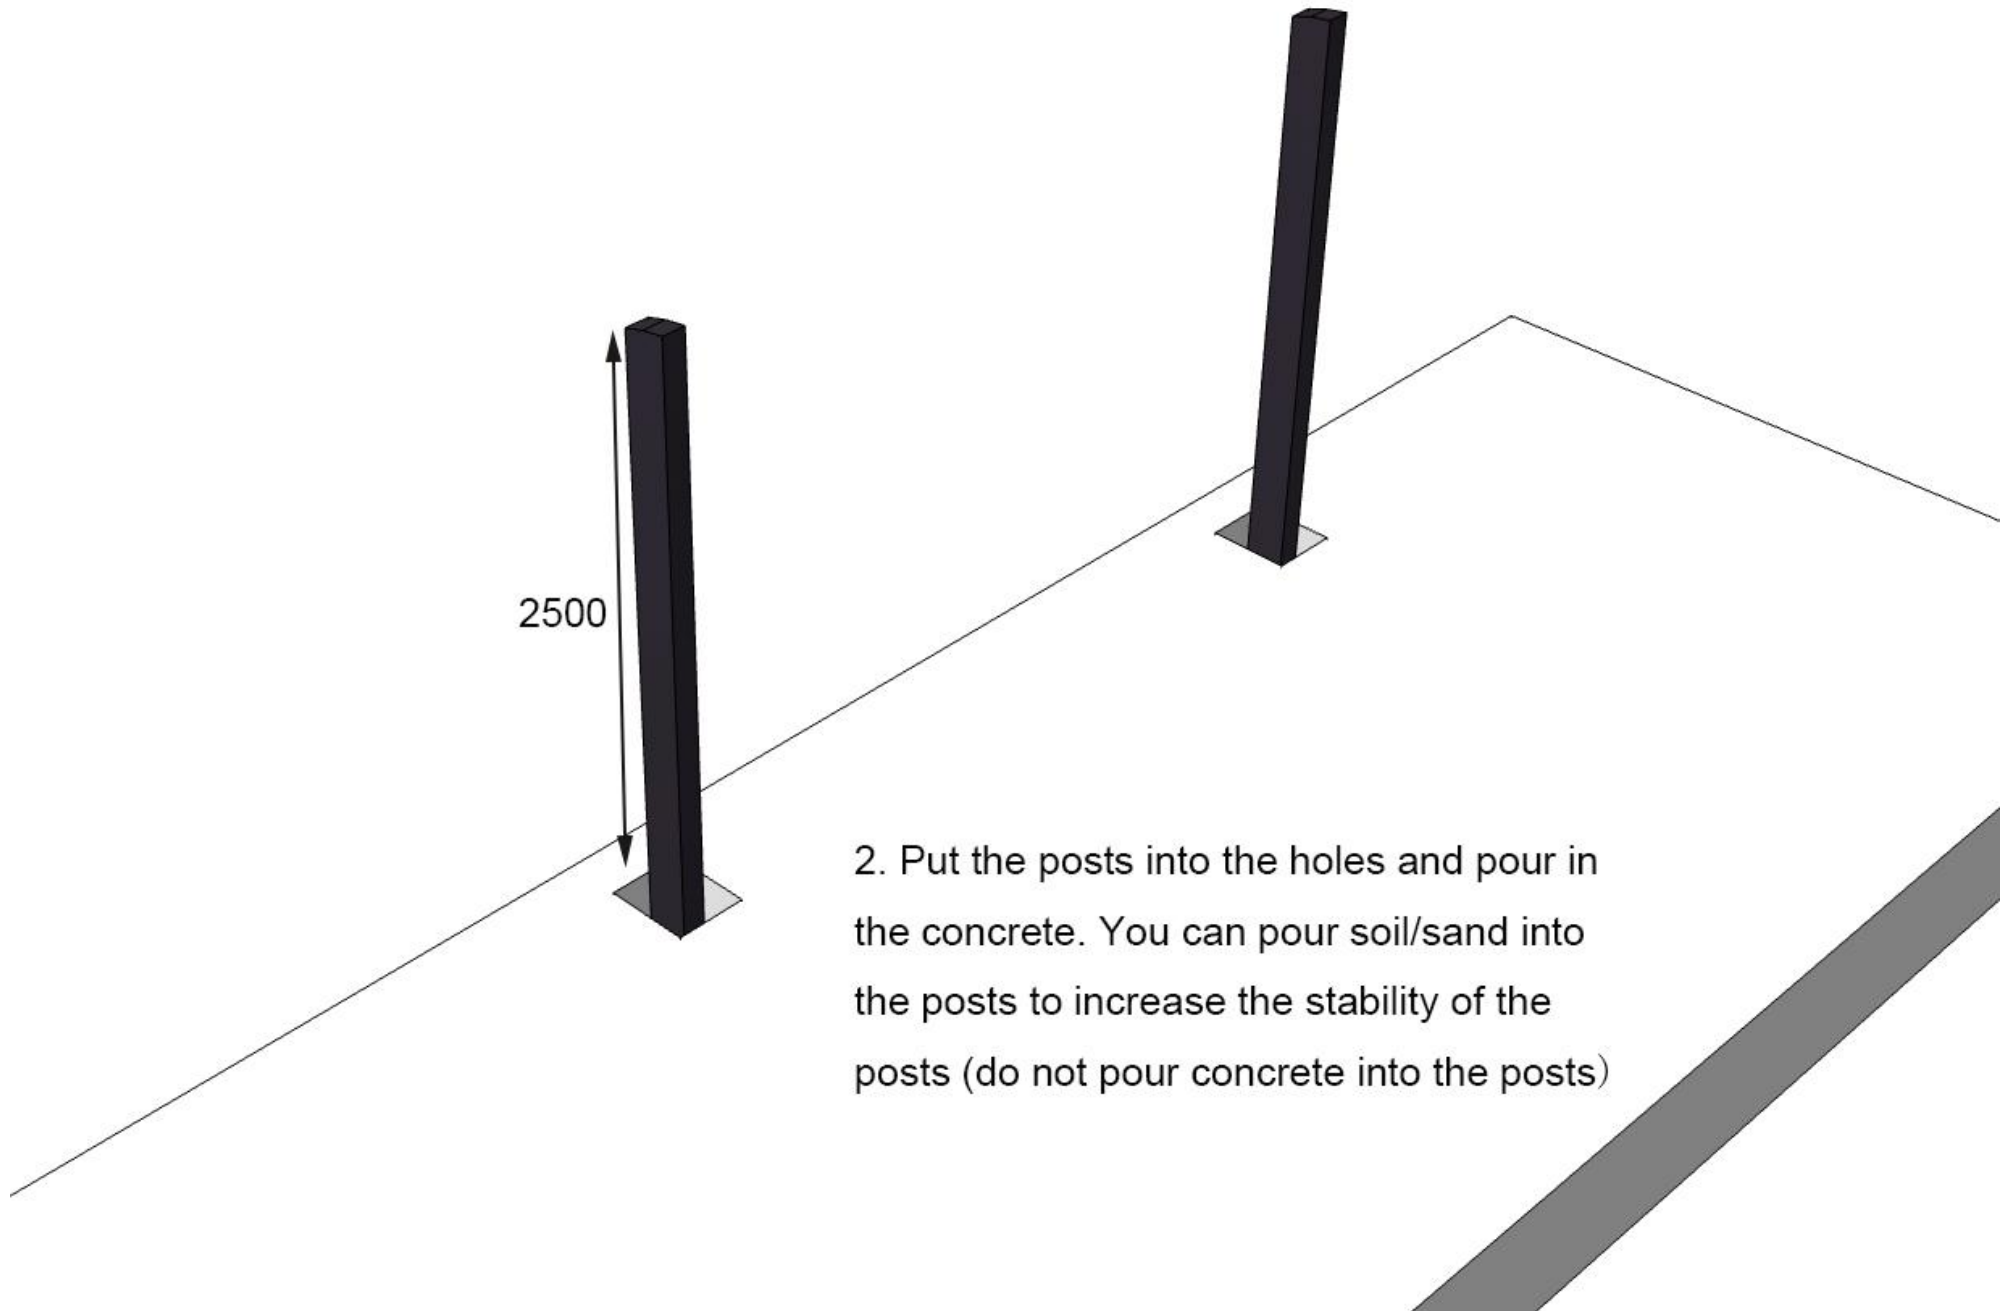

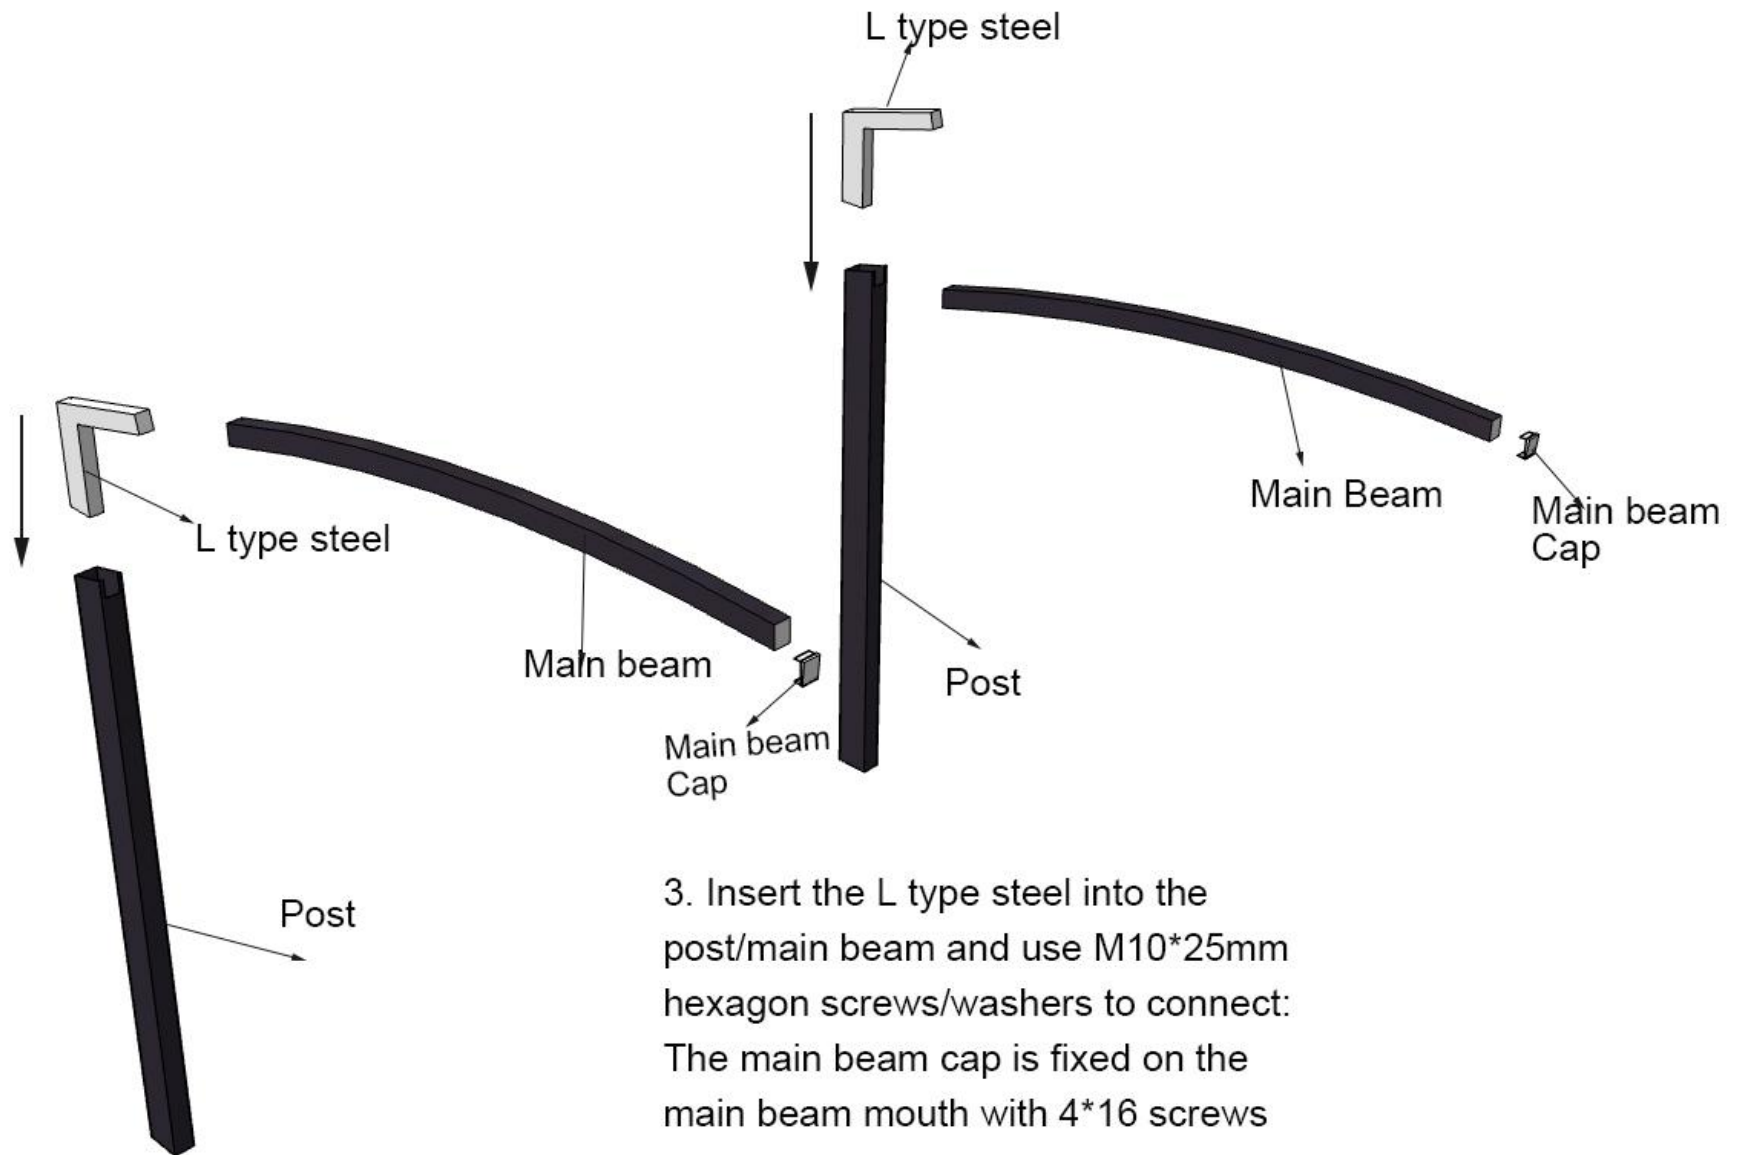




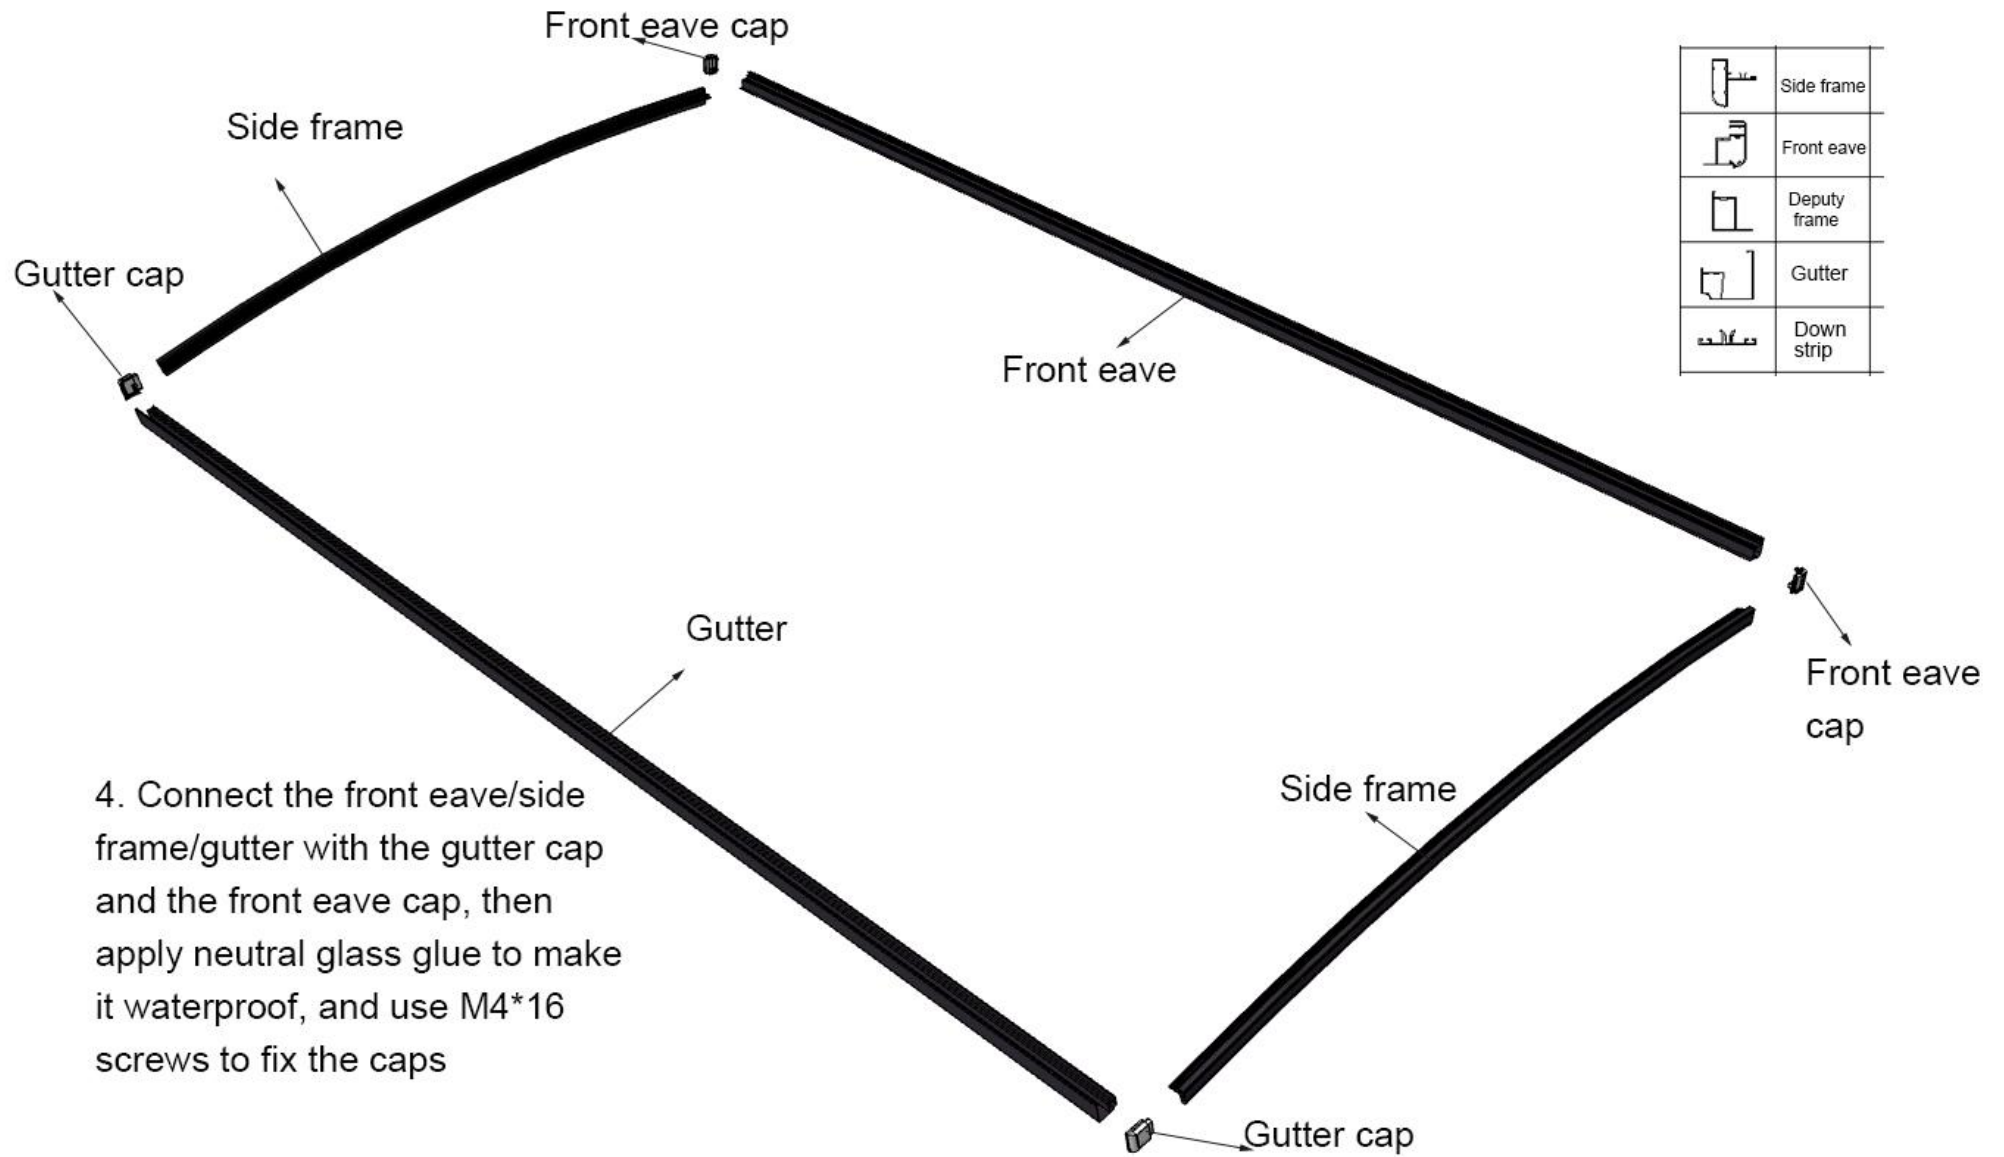


Note: Refer this data for installation of deputy frame and downstrip illustrated on pages 6 & 7


This data represents the curvature of 2952

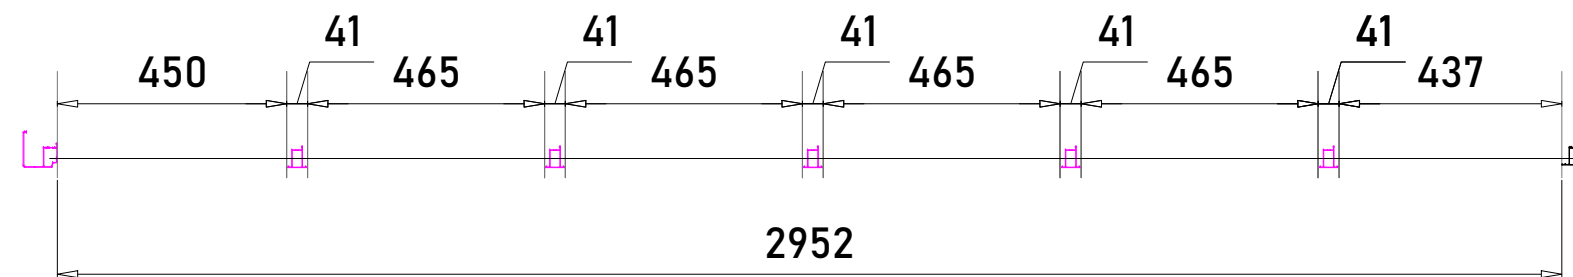


Deputy framework spacing

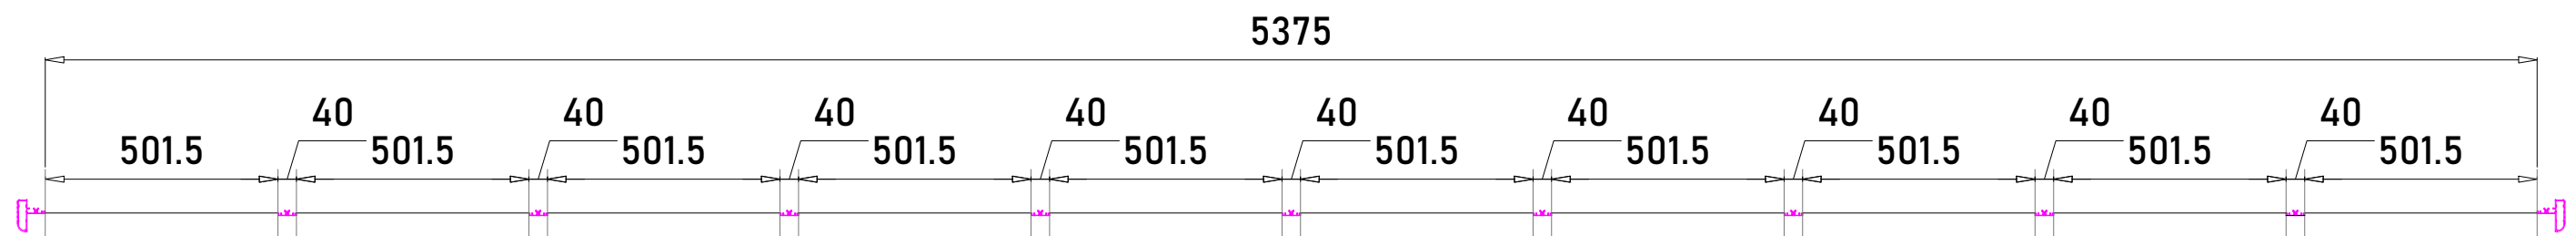

down strip spacing

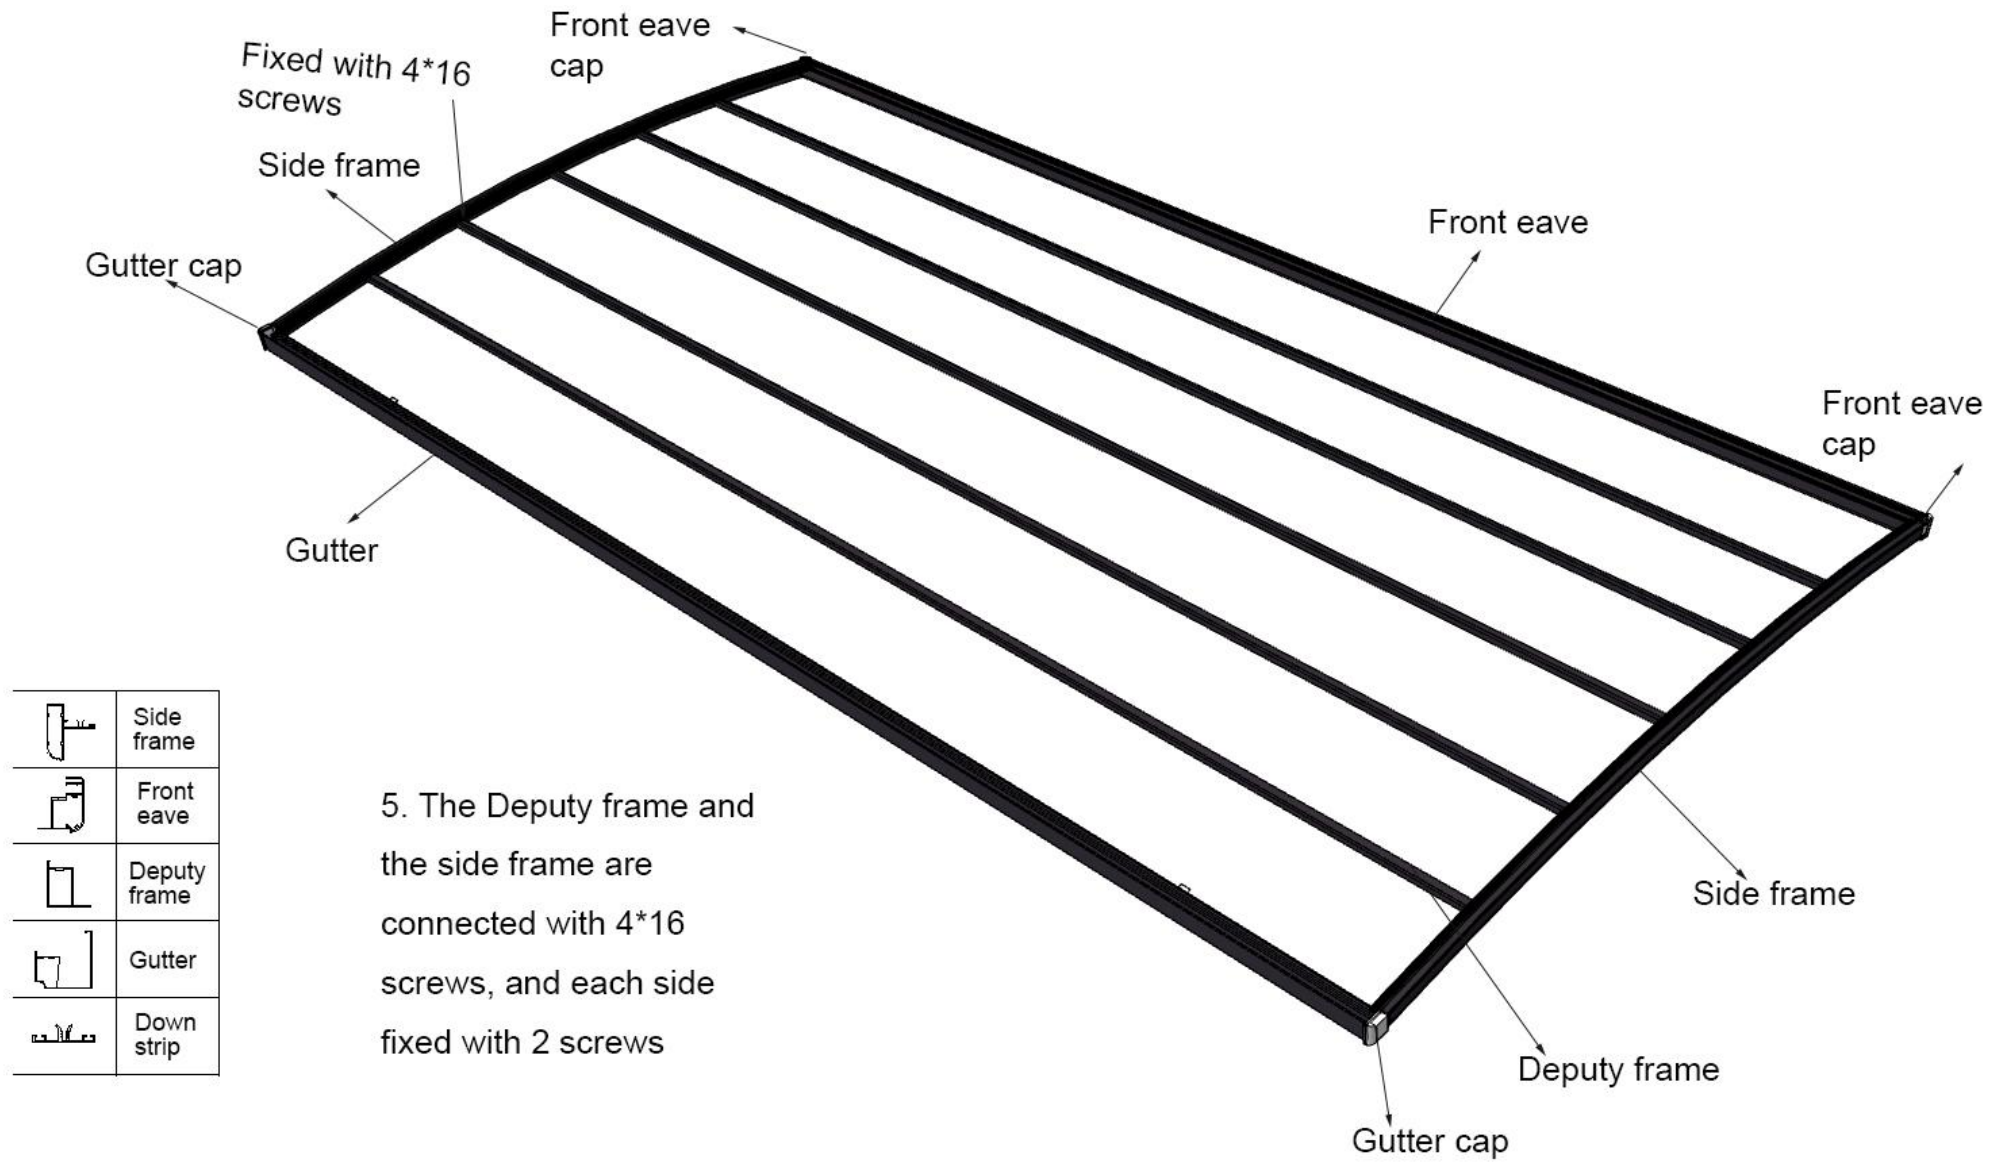


	Side frame
	Front eave
	Deputy frame
	Gutter
	Down strip

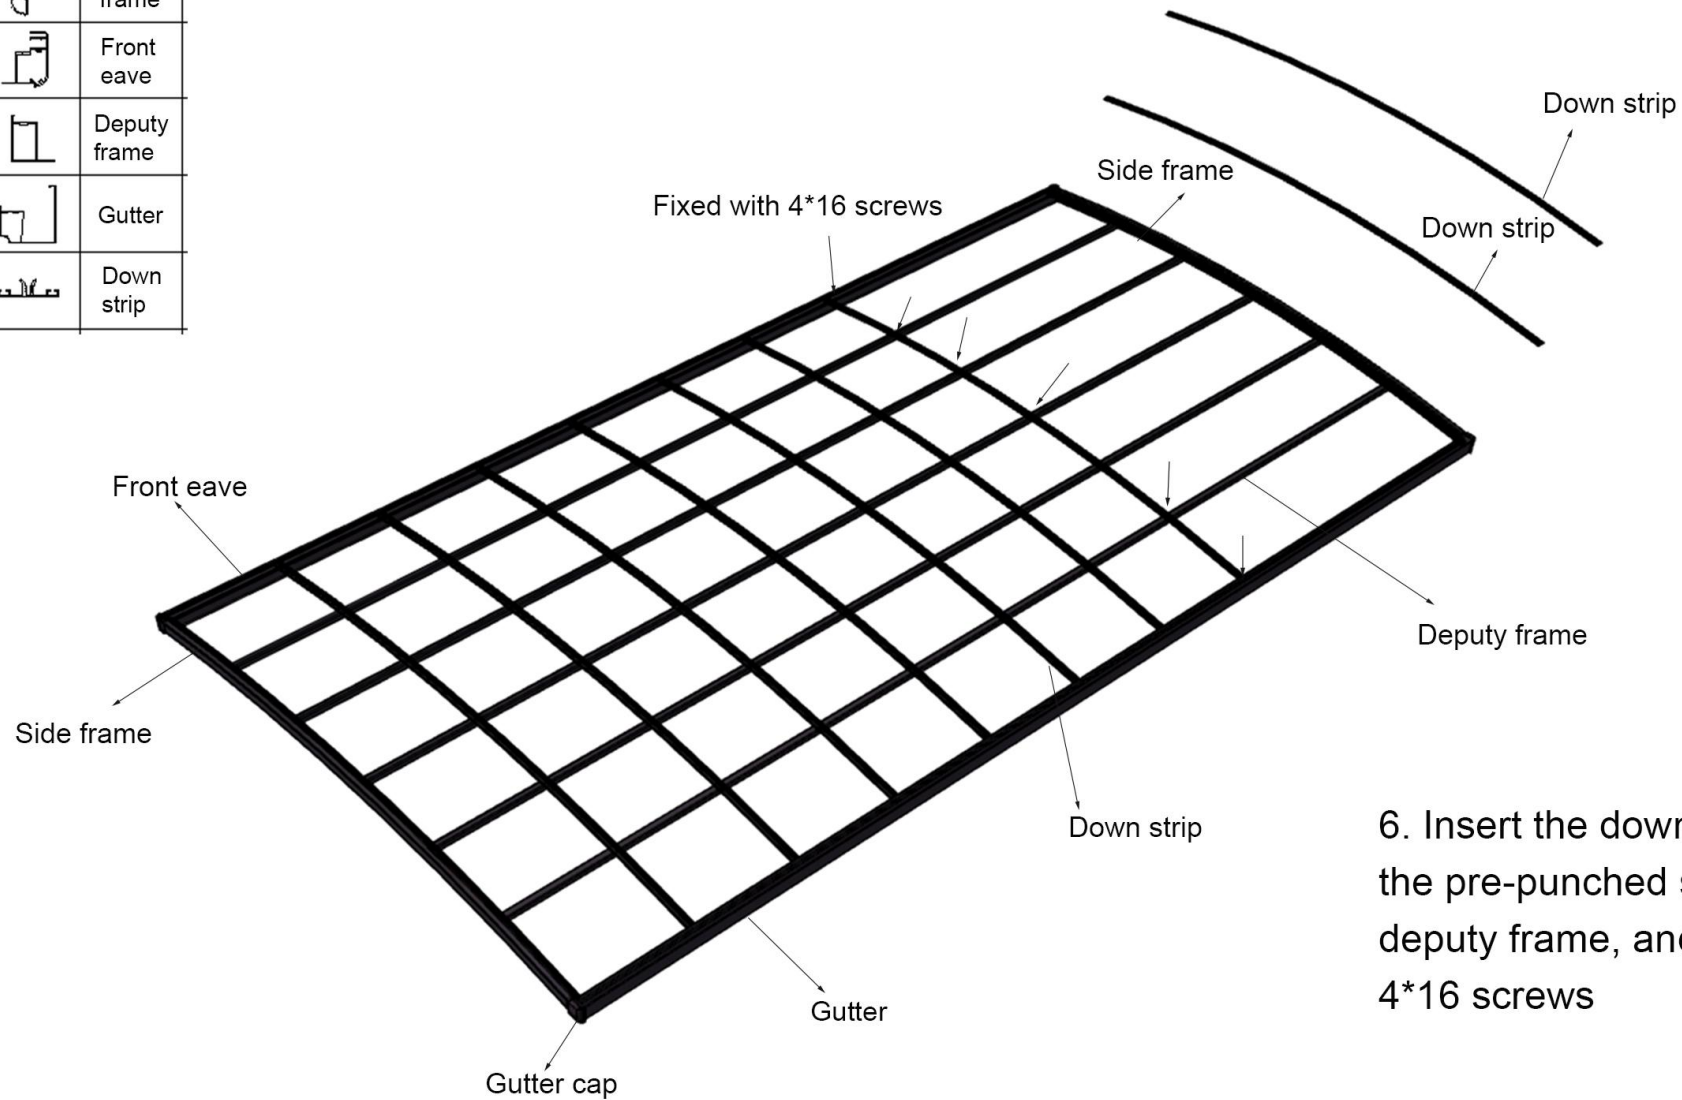



6. Insert the down strip into the pre-punched slots of the deputy frame, and fix with 4*16 screws

Use 4*16 screws to fix the
deputy frame on
the main beam

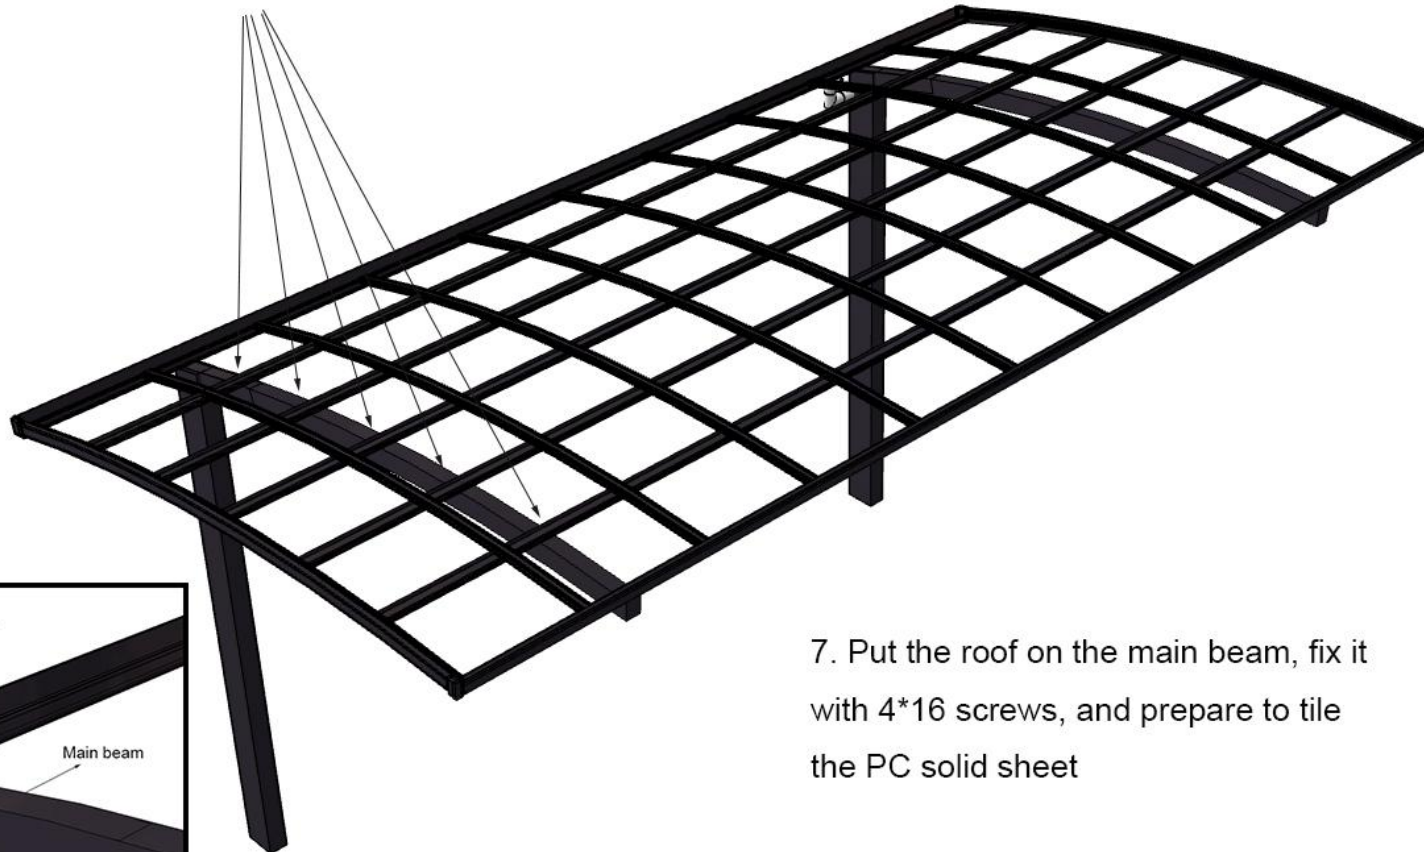


7. Put the roof on the main beam, fix it
with 4*16 screws, and prepare to tile
the PC solid sheet

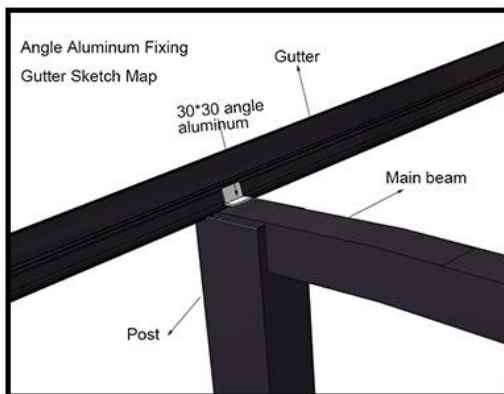


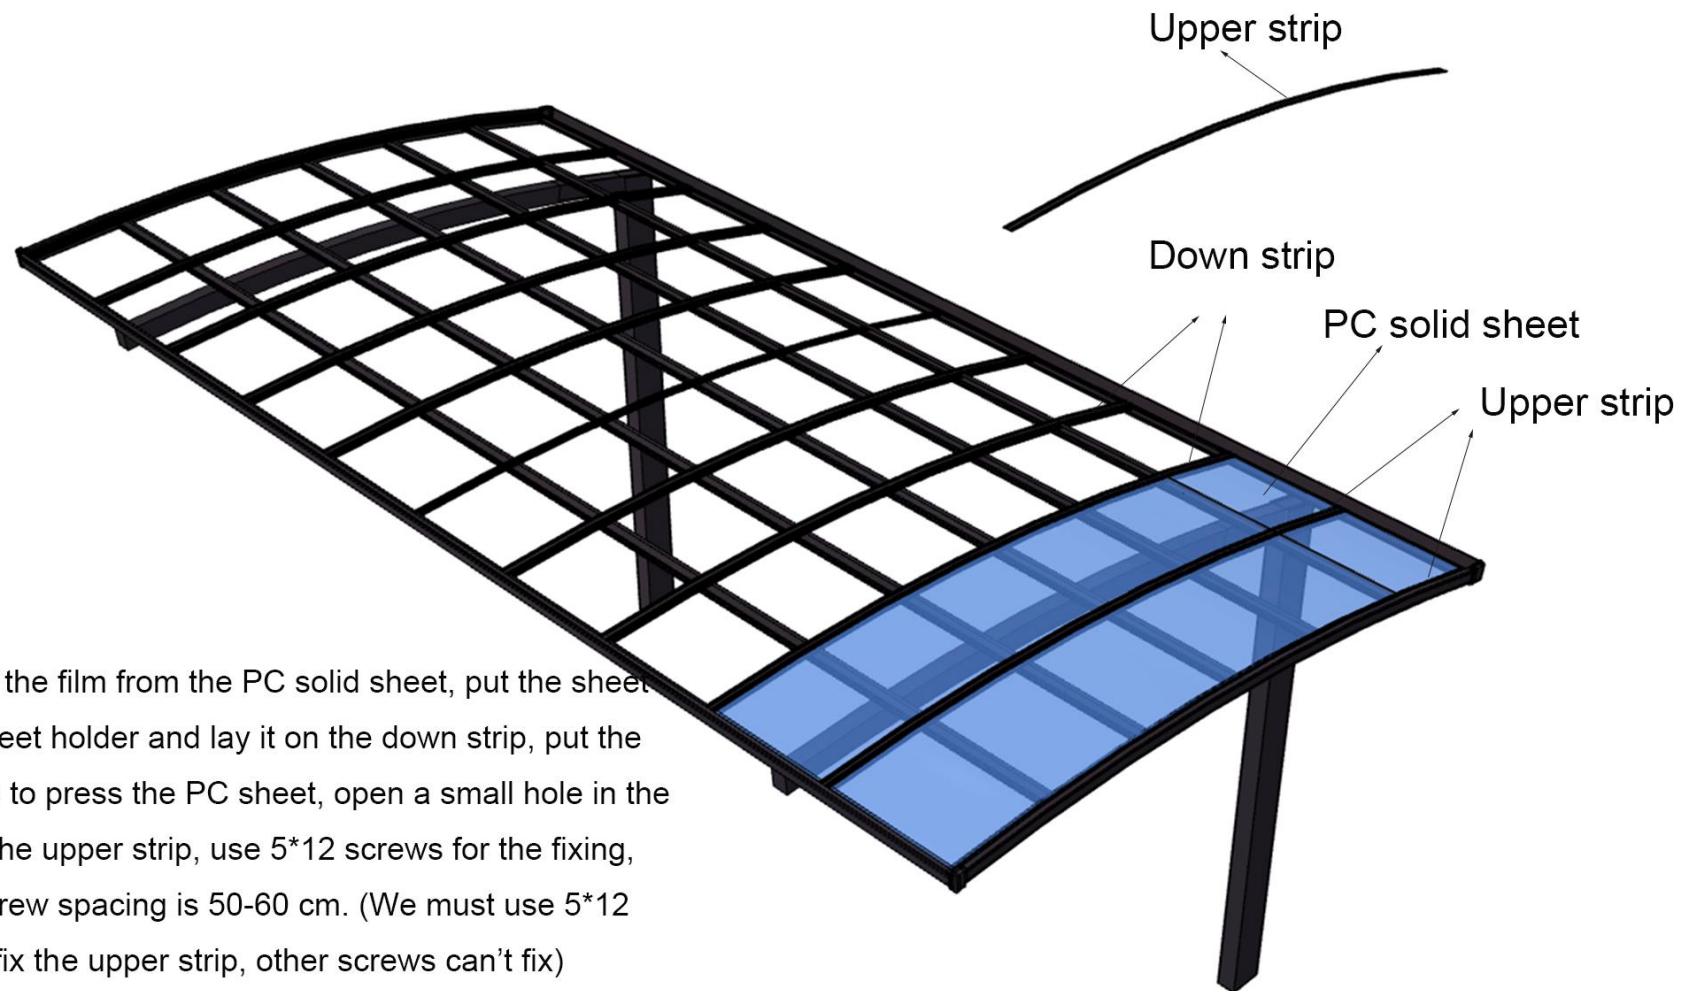


8. Tear off the film from the PC solid sheet, put the sheet into the sheet holder and lay it on the down strip, put the upper strip to press the PC sheet, open a small hole in the middle of the upper strip, use 5*12 screws for the fixing, and the screw spacing is 50-60 cm. (We must use 5*12 screws to fix the upper strip, other screws can't fix)

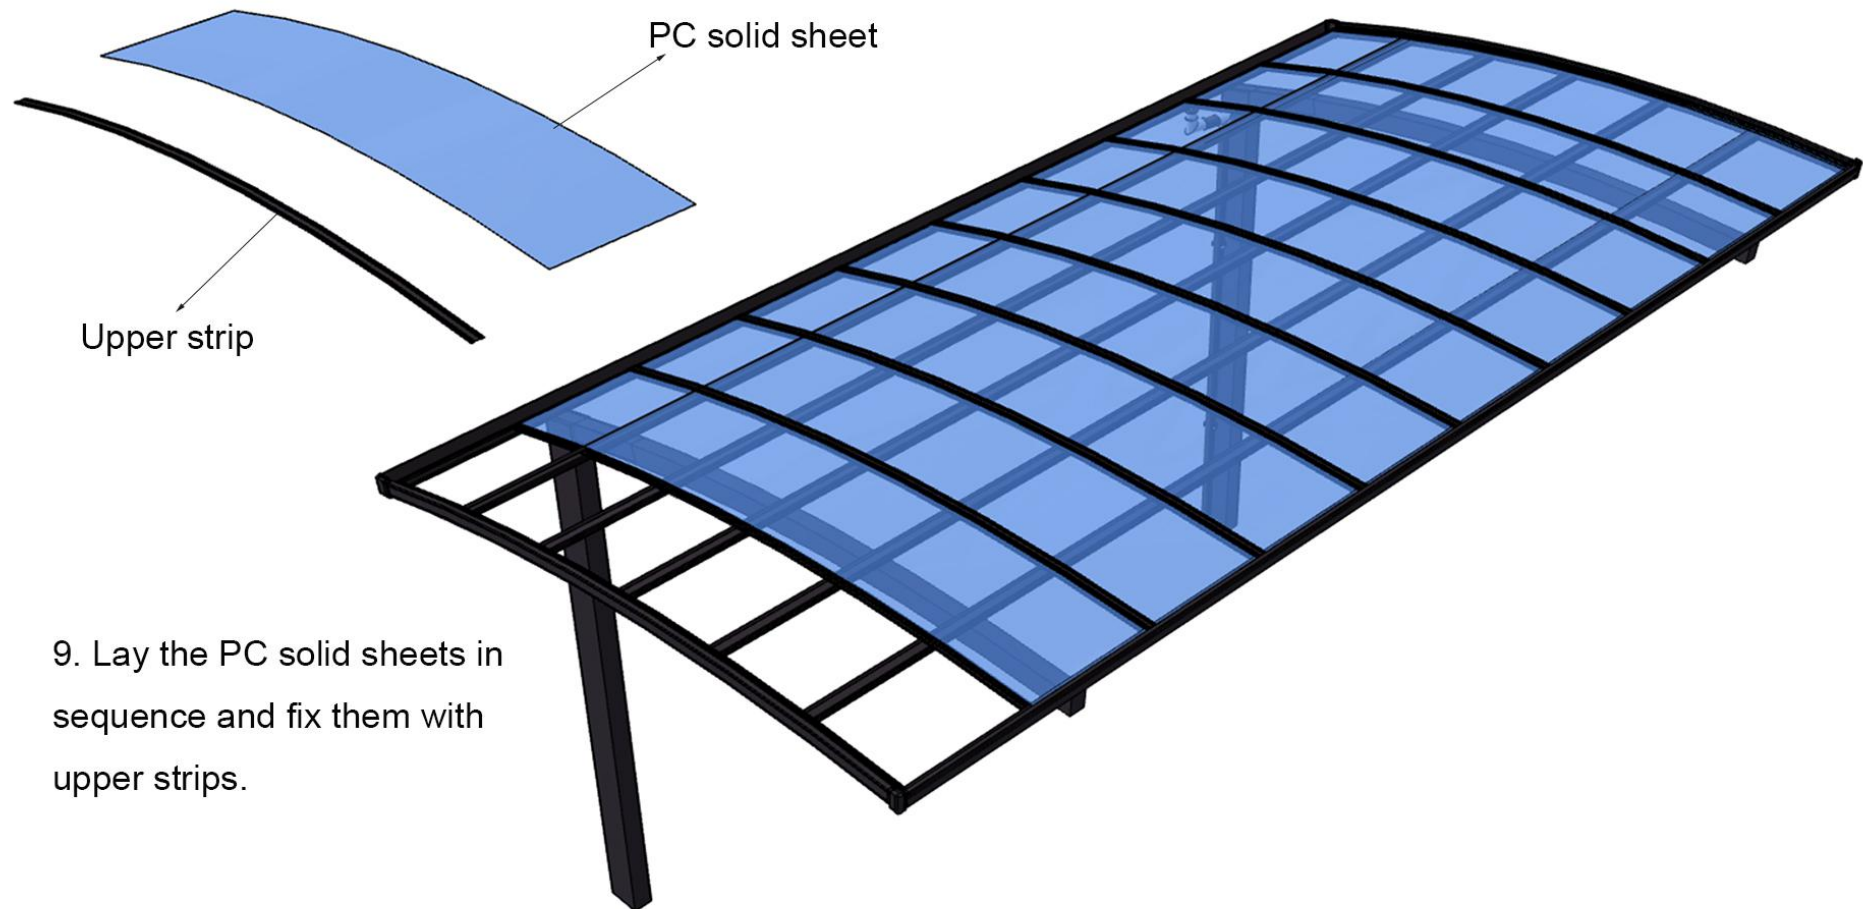

9. Lay the PC solid sheets in sequence and fix them with upper strips.

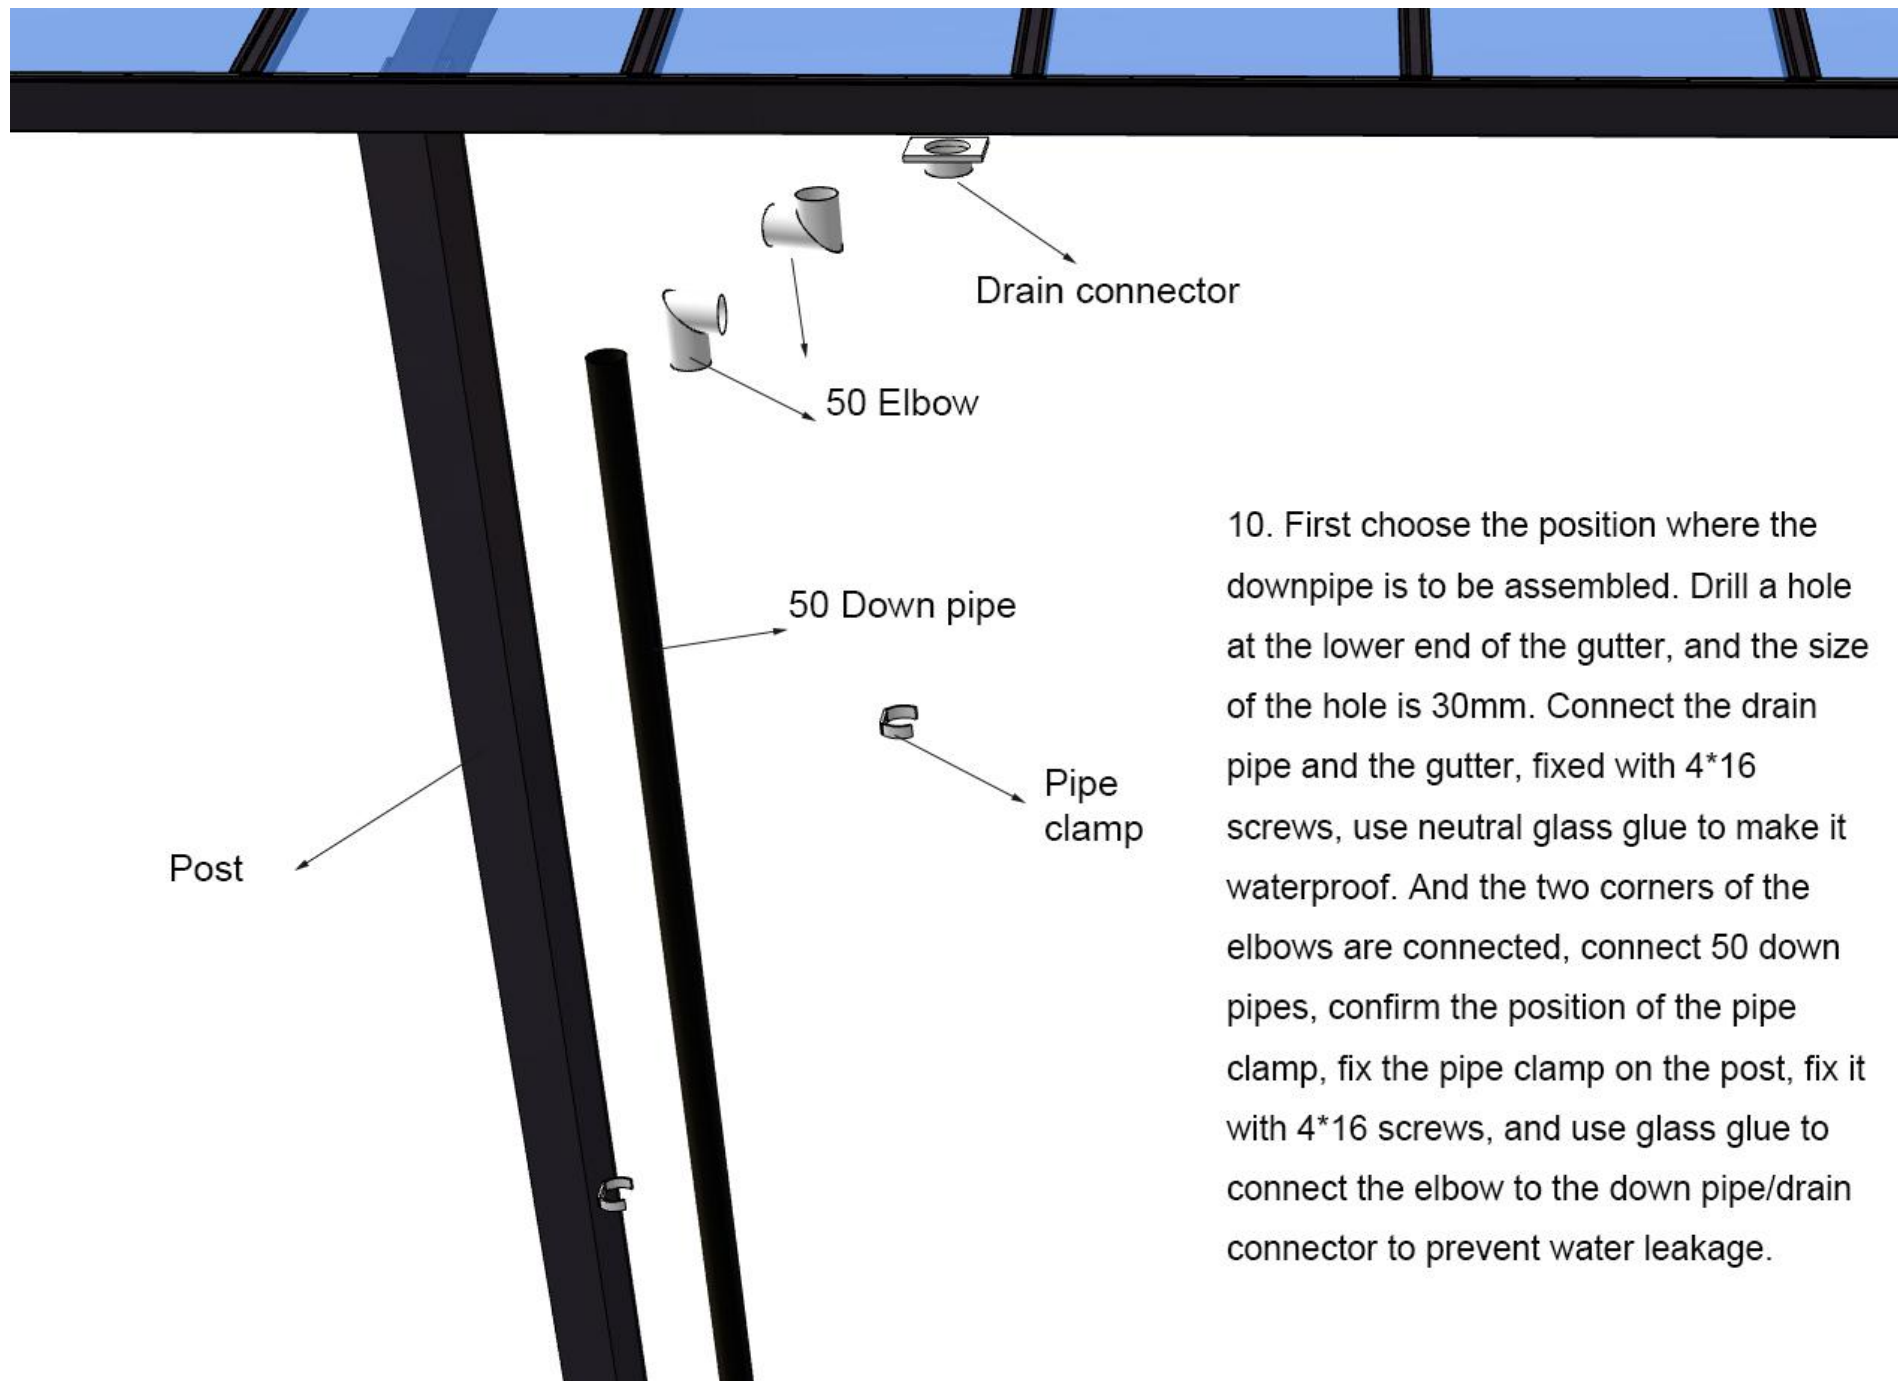


10. First choose the position where the downpipe is to be assembled. Drill a hole at the lower end of the gutter, and the size of the hole is 30mm. Connect the drain pipe and the gutter, fixed with 4*16 screws, use neutral glass glue to make it waterproof. And the two corners of the elbows are connected, connect 50 down pipes, confirm the position of the pipe clamp, fix the pipe clamp on the post, fix it with 4*16 screws, and use glass glue to connect the elbow to the down pipe/drain connector to prevent water leakage.

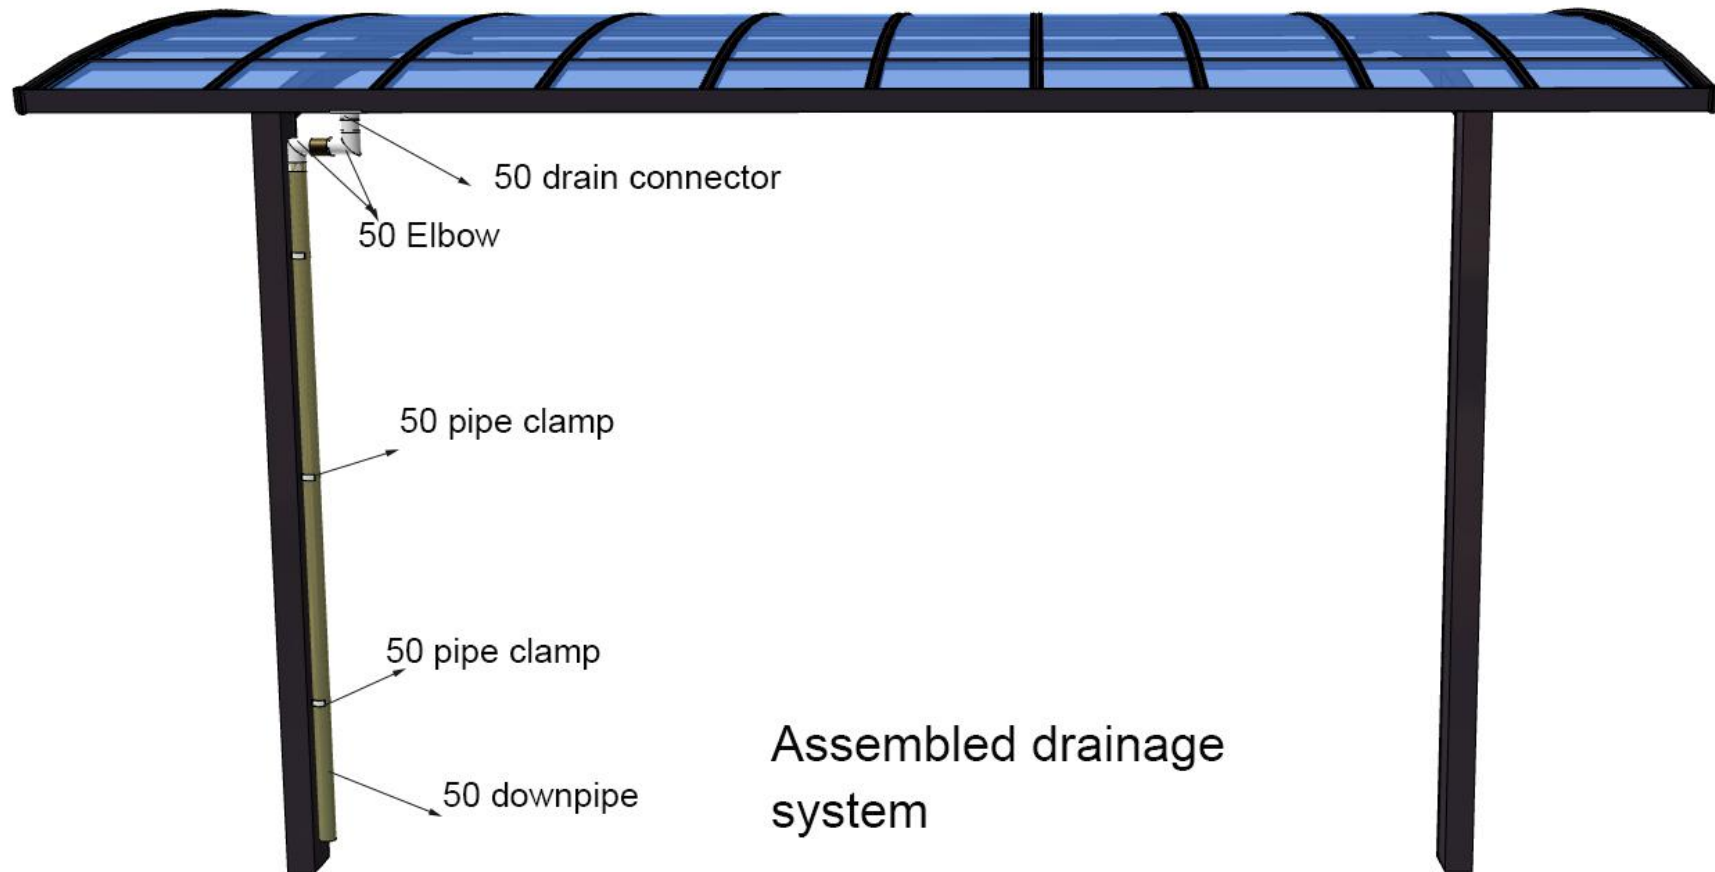




After assembly

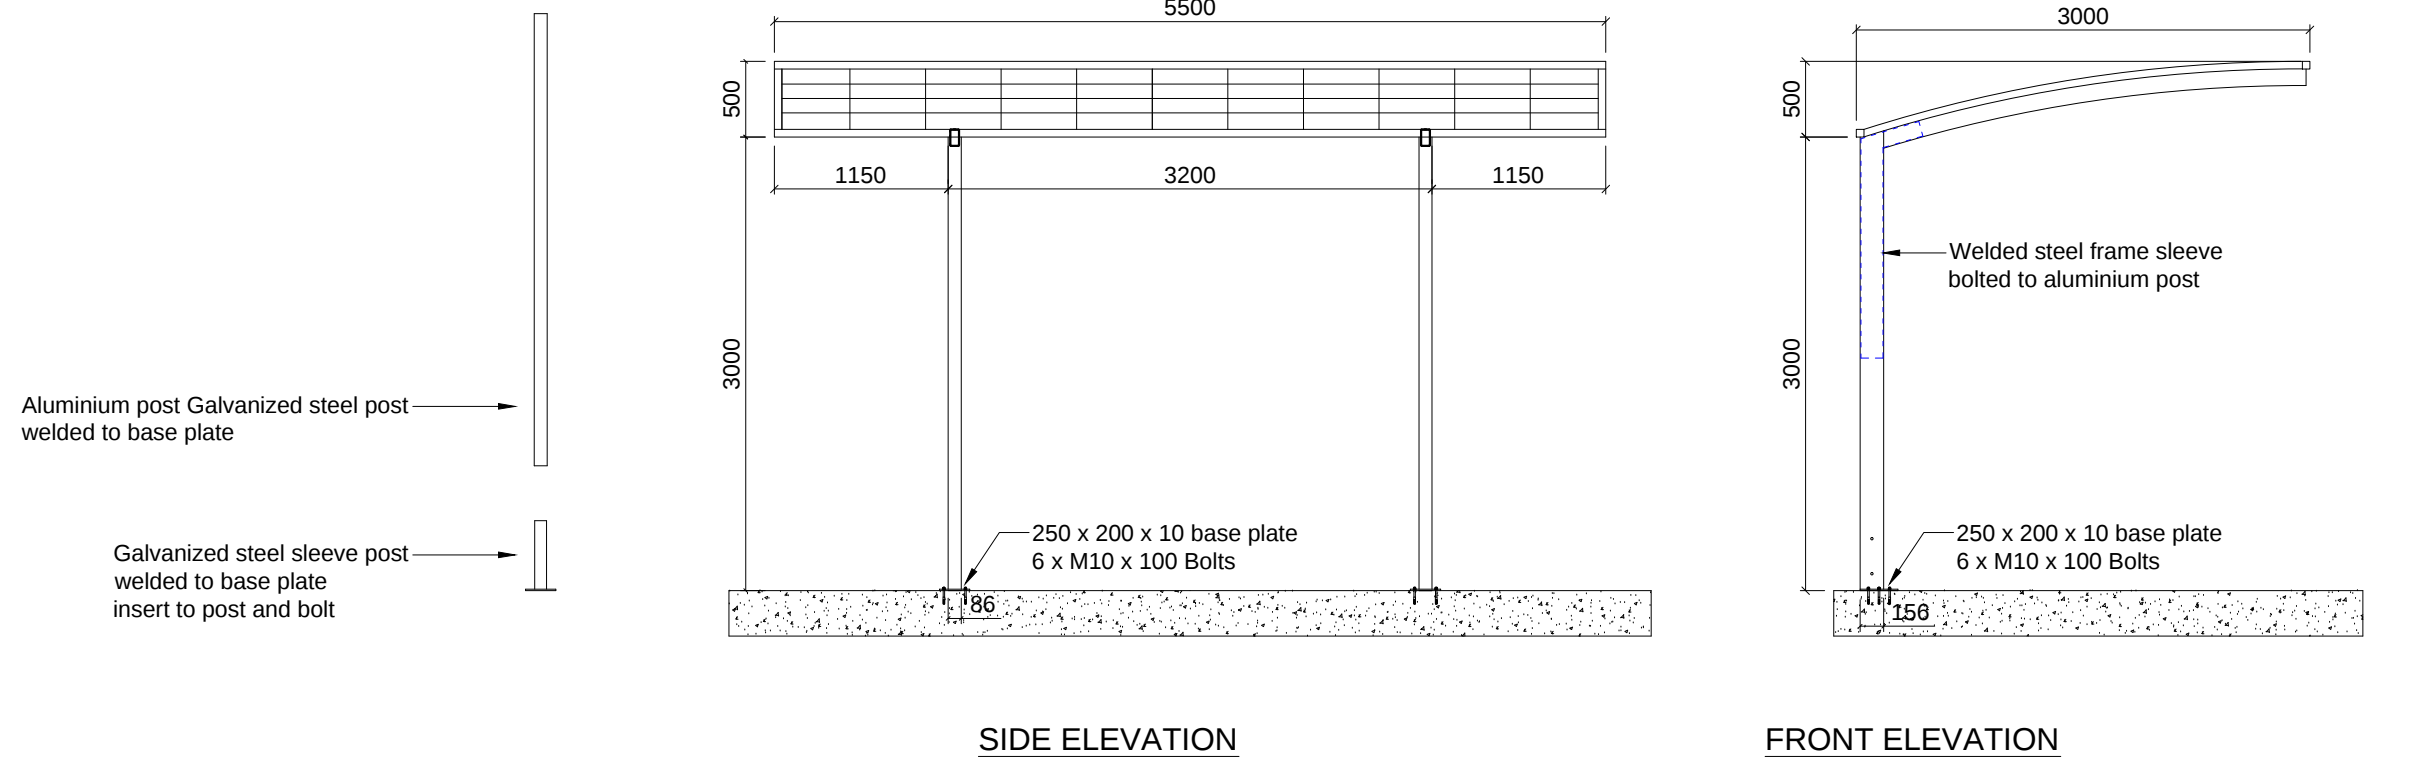

Base plate fixing

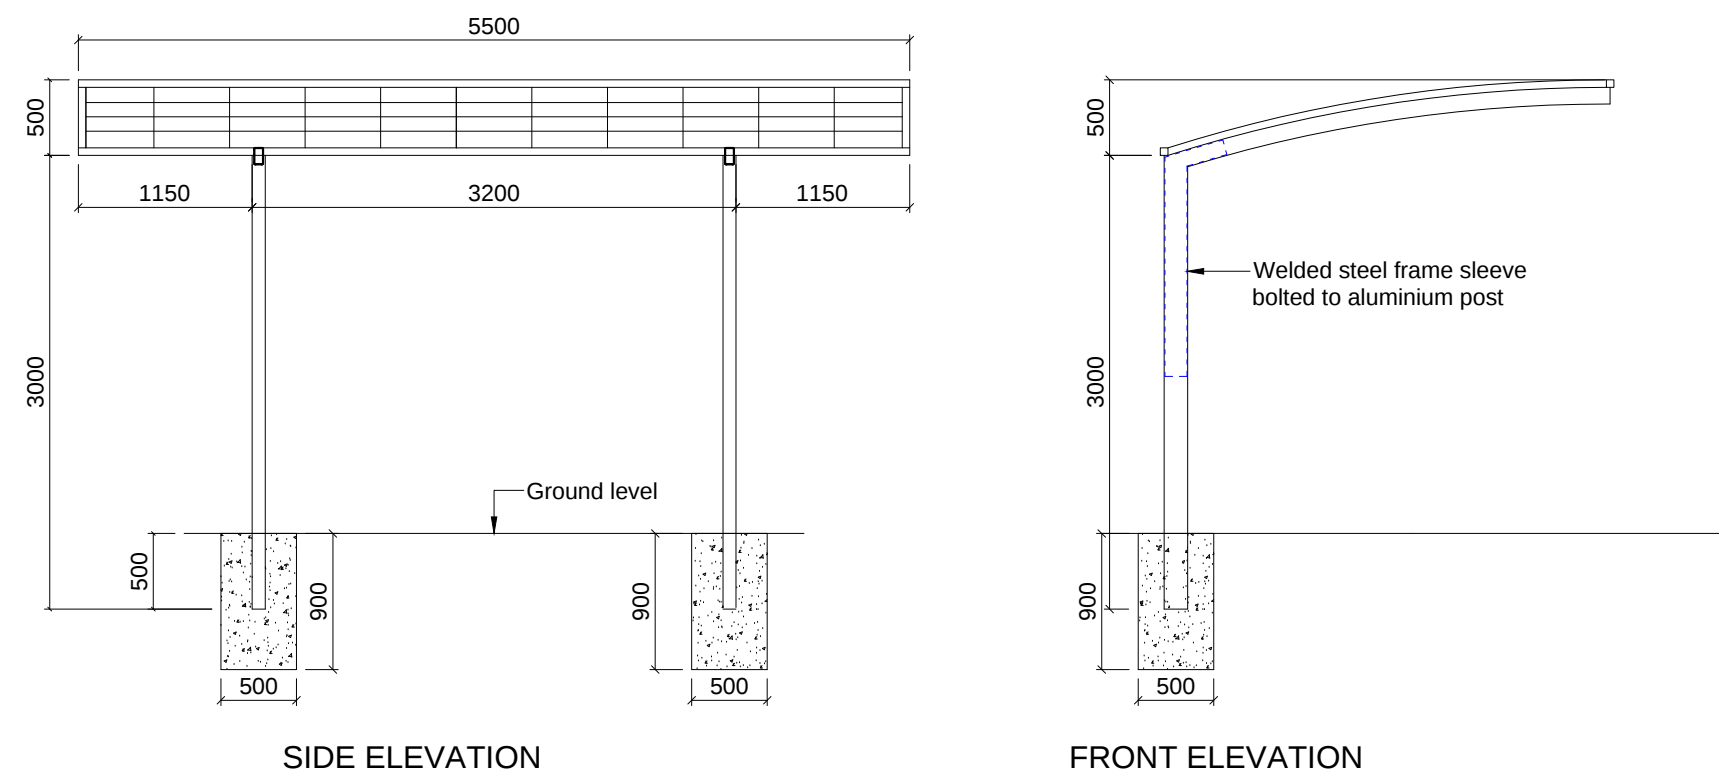

Ended to concrete

Acetech Arcitectural Pty Ltd
Standard sigle carport (5.5 m x 3.0 m x 3.0 m high)
Installation method details

Scale - 1:50 in A3